



HercuLoc Secure Bed Covers Electric Series

Instructions for Code Learning the Remote Transmitters:

1. Raise the HercuLoc™ Security Bed Cover and remove the cover from the actuator housing (the actuator housing cover is most easily removed with the bed cover in the $\frac{3}{4}$ raised position).
2. This is an AutoLoc keyless entry, and is designed so that the car key must be in the ignition and turned on before new remotes can be learned. You can replicate this condition by getting 12-volt power to the yellow wire from the “brain”. You will find the yellow wire hanging down at the relays. Connect a jumper wire (with a male blade terminal) to the female blade terminal on the yellow wire. Connect the other end of the jumper wire to the positive (+) terminal on the terminal strip.
3. With 12-volt power still connected to the yellow wire, press the red valet button for three seconds. You will find the valet button sticking out of the wiring harness of the “brain”.
4. Press any button on the remote transmitter to learn it. Any additional and existing remote transmitters must also be re-learned at this time. Up to 4 remote transmitters can be learned at this time.
5. Disconnect the 12-volt power from the yellow wire and wait 5 seconds for the system to exit code learning.
6. Replace the cover on the actuator housing.